

Installation Instructions For Loading Dock Door Nets With Recessed Floor Mount


www.usnetting.com

1-800-331-2973



STEP 1

Prep floor,
Clean Area

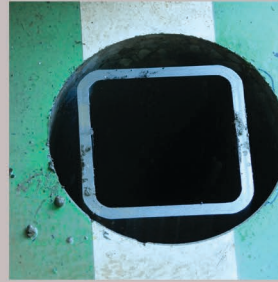

STEP 6

Keep sleeve flush
with existing floor,
ensure tube is
properly aligned




STEP 2

Position tube in
relation to the door
rail to ensure proper
door operation
without
interference



STEP 7

Pour concrete around
tube and insert upright
tube into sleeve insert
while concrete is wet,
properly level tube and
remove upright tube.
allow 2-3 days to cure

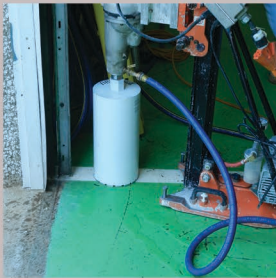

STEP 3

Place core drill in
proper location
(7-inch Core bit)



STEP 8

Insert Upright tube
and attach eyebolt



STEP 4

Remove insert and
clean hole of debris



STEP 9

Attach net and
fasten straps tightly



STEP 5

Insert steel
tubing sleeve



STEP 10

Properly Installed
Safety Net