

Installation Instructions For Loading Dock Door Nets With Floor Mounted Bollard


www.usnetting.com

1-800-331-2973




STEP 1

Measure and mark the top edge of the highest bracket and the holes that will be drilled (or welded)

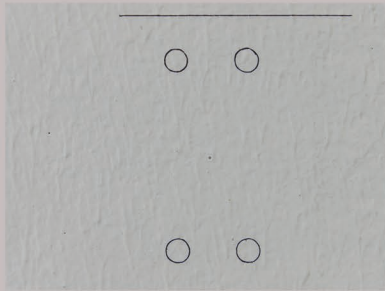

STEP 2

If drilling into wood, mark pilot holes as shown

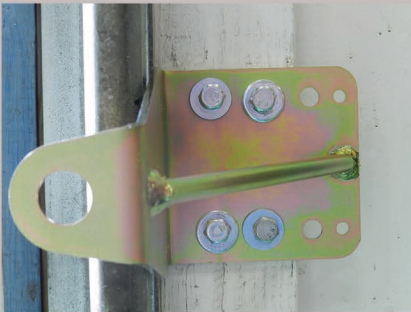

STEP 3

Fasten mounting bracket to the wall with provided bolts, or weld bracket to rail supports




Properly Mounted Brackets



STEP 4

Secure the hooks to the mounting bracket, four on each side, beginning with the top and working your way down, then tighten straps

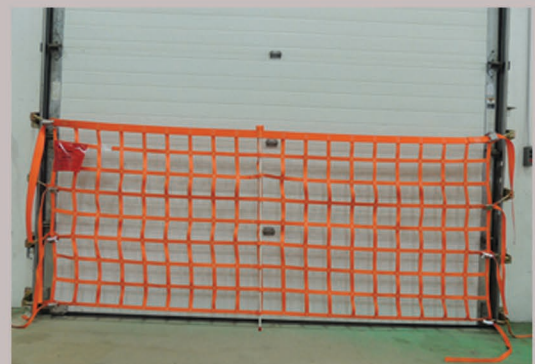

Loading Dock Safety Net Properly Installed

Hardware Examples



View of fastening Hook