


1



1. Clean the area . Measure 3" from door rail and place post base with at least 1.5" coverage of the door rail. Mark the holes with the enclosed marker.

2

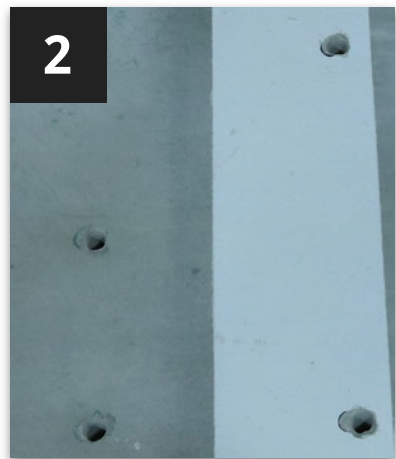

2. Drill holes 3" deep with included drill bit. Note: Make sure to keep inside of holes clean of debris.

3



3. Place base over holes and insert anchor bolts with washer and nut.

4



4. Hammer bolt into bottom of the hole, fasten nut with socket wrench.

5




5. Slide top of post onto the base. Repeat steps 1-5 for the second post.

6



6. Attach eyebolt and tighten. The bottom eyebolt holds post top to the base when tightened.

7

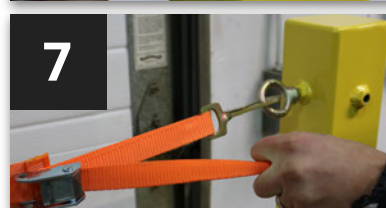

7. Attach the net starting with each top hook. Evenly tighten straps by pulling on excess. Wrap loose ends of straps with rubber bands or trim with hot knife.

8



8. Stow by disconnecting from one side and rolling to the other. Hook the top strap to the top eyebolt as shown to the left.