

Installation Instructions For Loading Dock Door Nets With Floor Mounted Bollard


www.usnetting.com

1-800-331-2973



STEP 1

Measure and mark the top edge of the highest bracket and the holes that will be drilled (or welded)

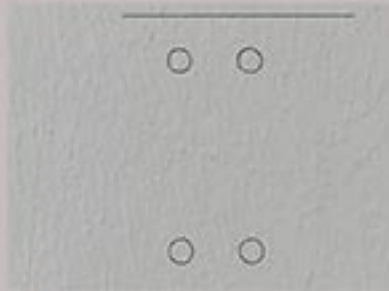

STEP 2

If drilling into wood, mark pilot holes as shown



STEP 3

Fasten mounting bracket to the wall with provided bolts, or weld bracket to rail supports



STEP 4

Secure the hooks to the mounting bracket, four on each side, beginning with the top and working your way down, then tighten straps

Hardware Examples



View of fastening Hook



Properly Mounted Brackets



Loading Dock Safety Net Properly Installed