

# INSTRUCTION MANUAL

## Wall Mounted Safety Net

*by US Netting*



**US NETTING**

1-800-331-2973 | [sales@usnetting.com](mailto:sales@usnetting.com) | [www.usnetting.com](http://www.usnetting.com)

Your Wall Mounted safety net ships in one package with all of the necessary hardware included. Congratulations on making your loading dock the safest in the world!



#### SHIPMENT BREAKDOWN:

- 1 - Net
- 8 - Brackets
- 32 - Flat washers & fasteners (each)
- 1 - Allen wrench
- 1 - Marker
- 1 - Drill bit



#### REQUIRED TOOLS:

- Power drill
- 6" extension
- 1/2" nut driver
- Tape measure
- Eye & ear protection (recommended)

Please visit [www.usnetting.com](http://www.usnetting.com) for a step-by-step installation video.

## INSTRUCTIONS:

- 1 Measure from the floor up to mark the top edge of each bracket, and each hole to be drilled. Four brackets on each side of the door. Suggested placement is at 9.5 inches, 27 inches, 39.25 inches, and 56 inches from the floor. This can be adjusted to fit your application as needed.
- 2 Drill pilot holes and insert fasteners with washers through the bracket and tighten. Do not over fasten, as this can cause damage to the mounting surface.
- 3 Secure the hooks to the mounting brackets, starting with the top two and working your way down. Tighten the straps evenly on each side by pulling on the end that is fed through the buckle.
- 4 Be sure to wrap the excess end of the fastening strap with a rubber band or trim some off with a hot knife to prevent trips.
- 5 Stow by disconnecting from one side and rolling to the other. Hook the top strap to the top bracket as shown to the right.

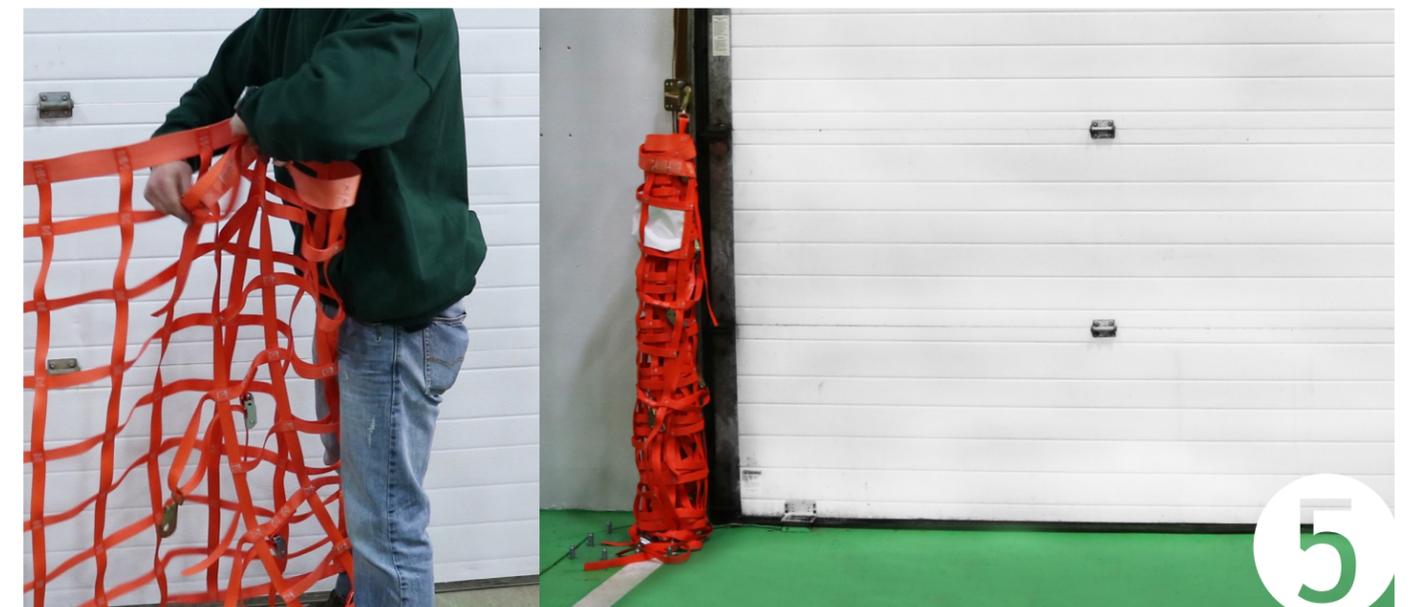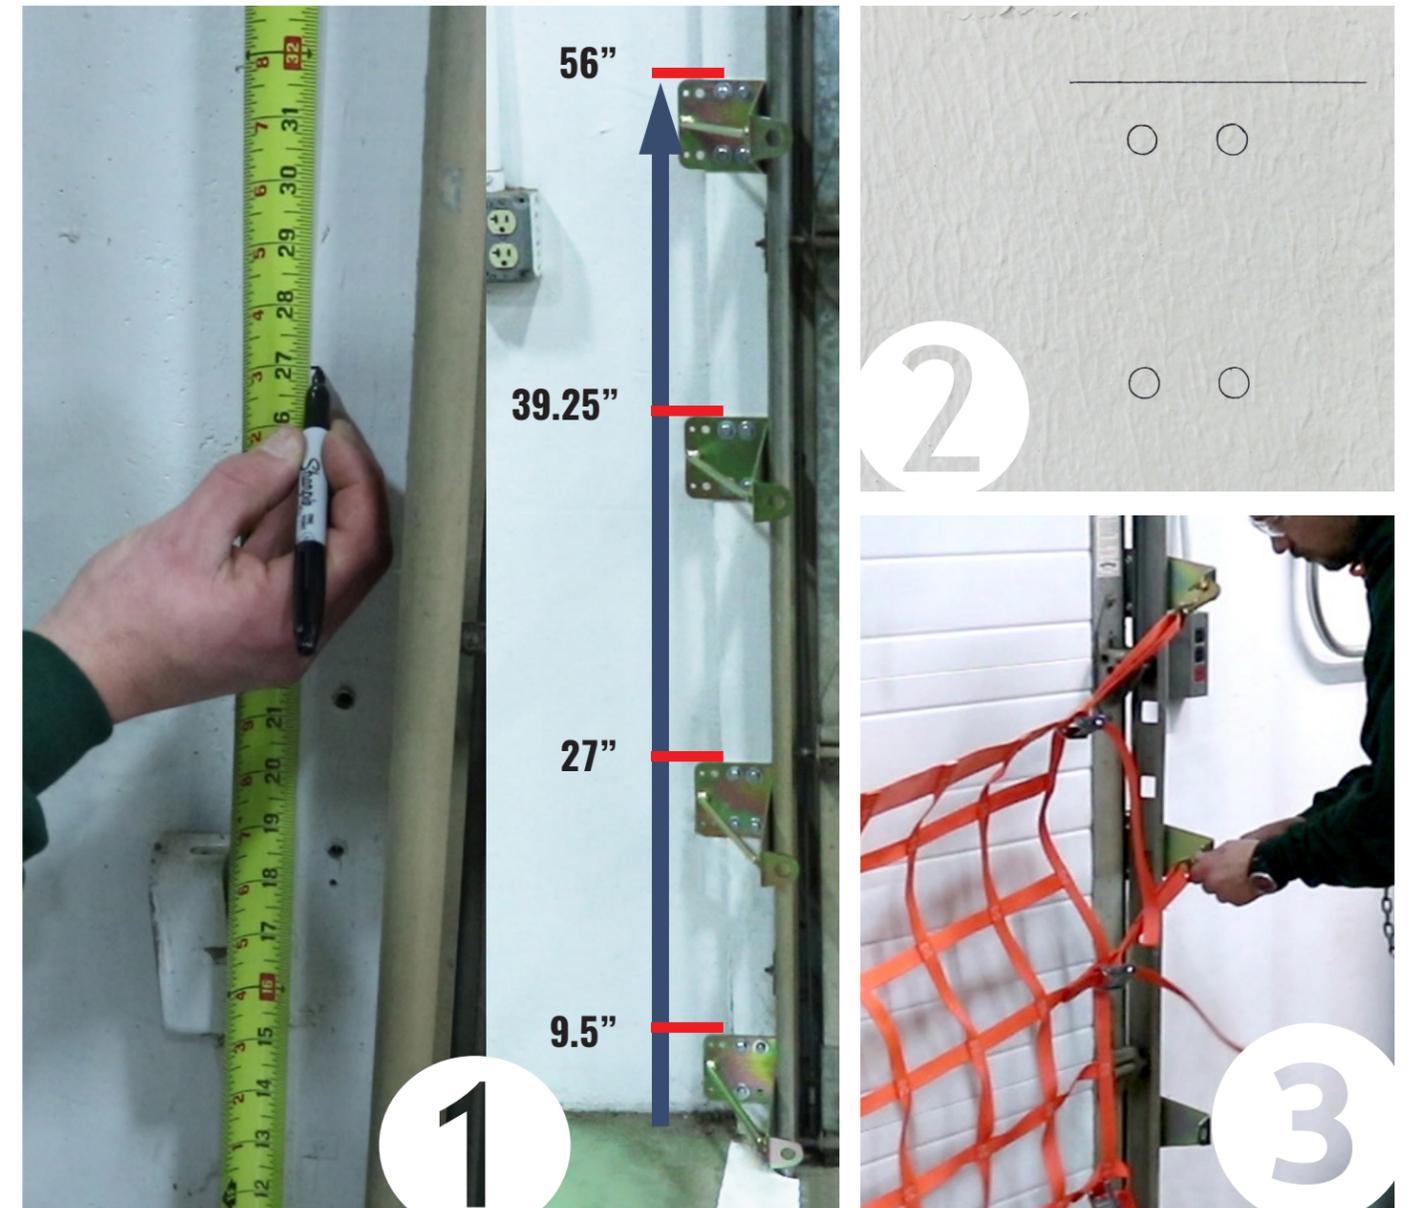



US NETTING

**DEFENDER**  **GATE**  
SAFETY GATE SYSTEM

 **Loading Dock  
Safety Nets**

**1-800-331-2973 | [www.usnetting.com](http://www.usnetting.com)**